COOPER ROMAN TUB FAUCET INSTALLATION

BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing plumbing fixtures. Signature Hardware accepts no liability for any damage to the faucet, plumbing, bathtub, floor, or for personal injury during installation.
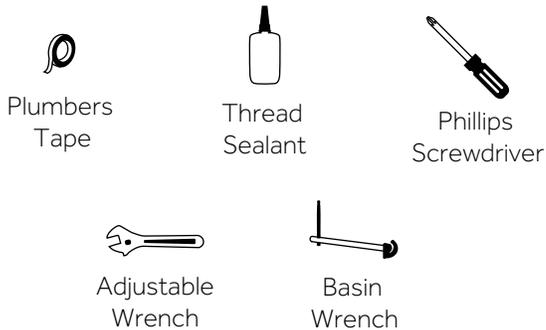
Observe all local plumbing and building codes.

Unpack and inspect the items for shipping damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.
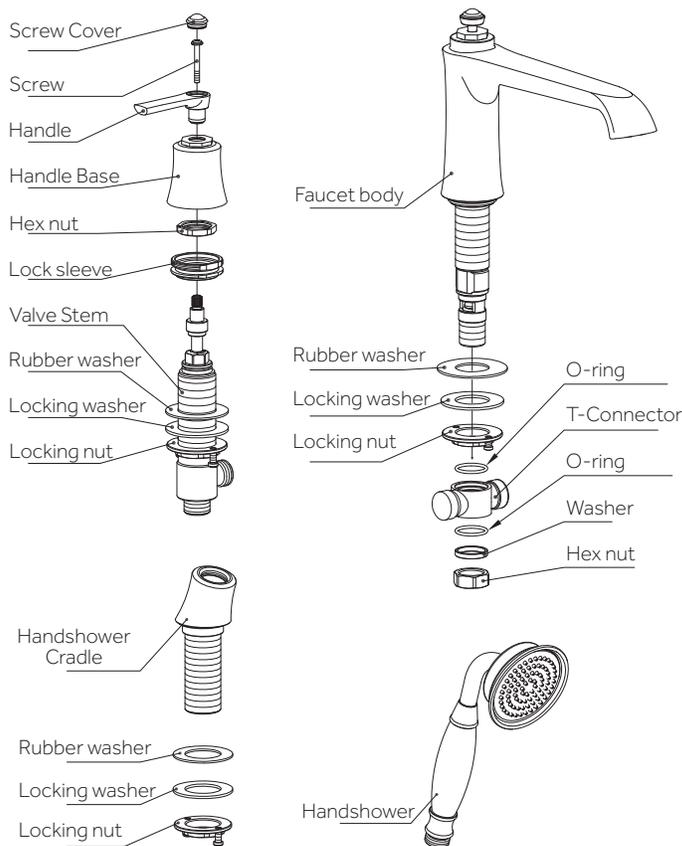
GETTING STARTED

• Ensure that you have gathered all the required materials that are needed for the installation.

• For these instructions, it is assumed that the old faucet has been completely removed and any necessary repairs or modifications to the water supply have been completed.

TOOLS AND MATERIALS:

Plumbers Tape

Thread Sealant

Phillips Screwdriver

Adjustable Wrench

Basin Wrench

PART IDENTIFICATION

Screw Cover
Screw
Handle
Handle Base
Hex nut
Lock sleeve
Valve Stem
Rubber washer
Locking washer
Locking nut

Faucet body
Rubber washer
Locking washer
Locking nut
O-ring
T-Connector
O-ring
Washer
Hex nut

Handshower Cradle
Rubber washer
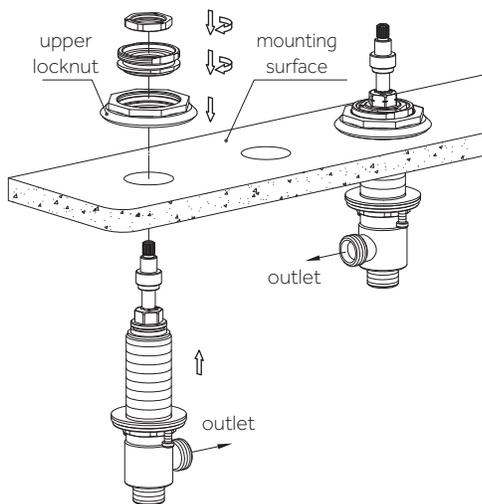Locking washer
Locking nut

Handshower

COOPER ROMAN TUB FAUCET INSTALLATION
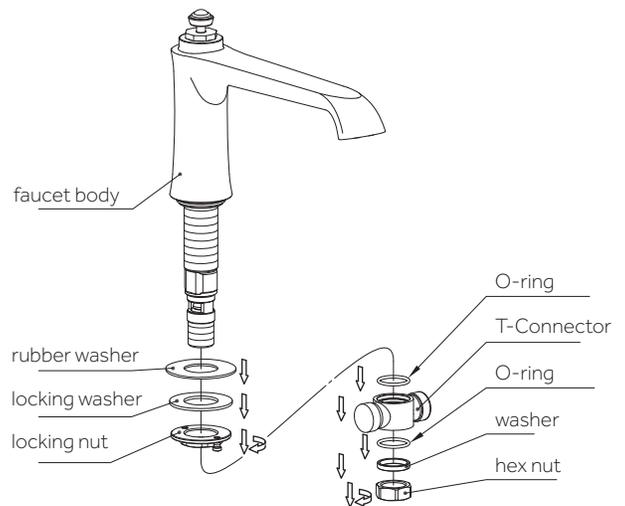
INSTALLATION

1. Remove the screw cover from the handle, then loosen the screw to remove the handle. Remove the handle base, hex nut, and lock sleeve from the valve stem. Move the lock nut, locking washer, and rubber washer to the base of the valve stem.
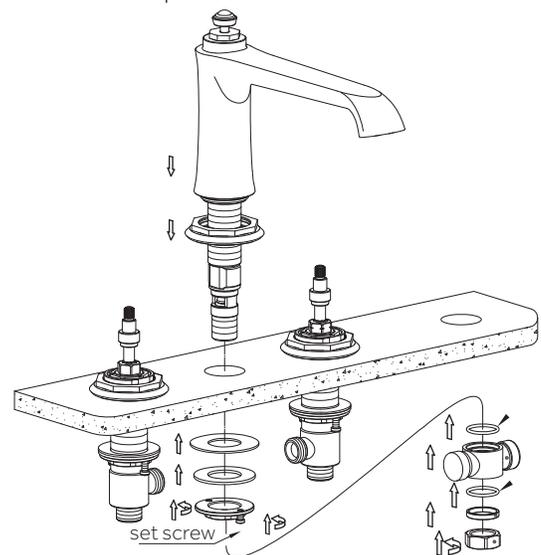

2. From below, insert each of the valve stems into their prepared mounting holes, as shown. Ensure that the hot valve (red) is on the left, and the cold valve (blue) is on the right. From above, thread the upper lock nut, lock sleeve, and hex nut onto the stems.

3. Remove the hex nut, washer, O-rings, and T-connector from the faucet body. Also remove the locking nut, locking washer, and rubber washer, as shown.
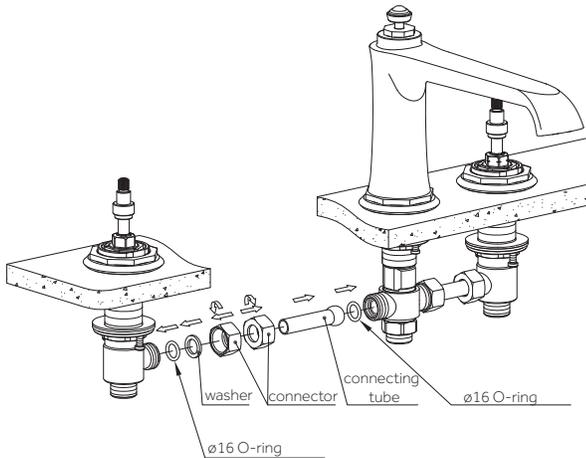

4. Insert the faucet body into its prepared mounting hole, as shown. From below, slide the rubber washer back onto the faucet body followed by the locking washer. Secure the faucet body using the locking nut. Tighten the set screw to fully secure. Reattach the T-connector, O-rings, washer, and hex nut, as shown, then remove the protective covers.
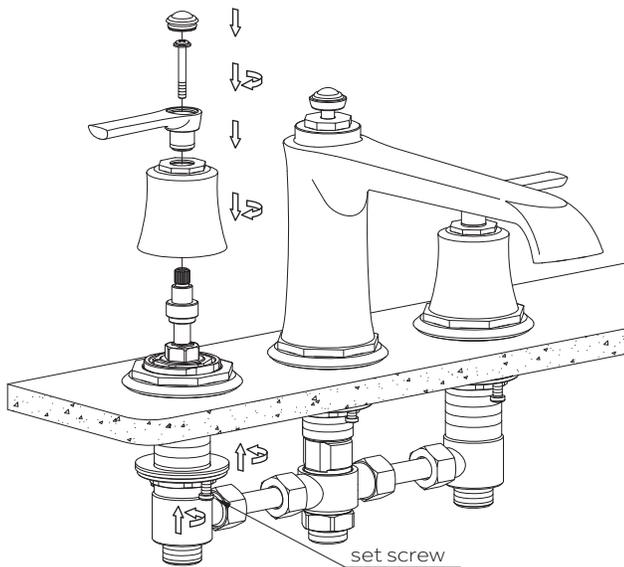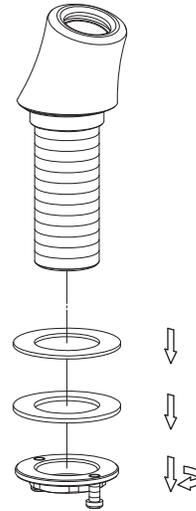
5. Connect each of the valve stems to the faucet body's T-connector using the connecting tubes. Ensure that all washers and O-rings are used and properly placed, as shown. Apply plumber's tape or thread sealant to the threads before tightening.

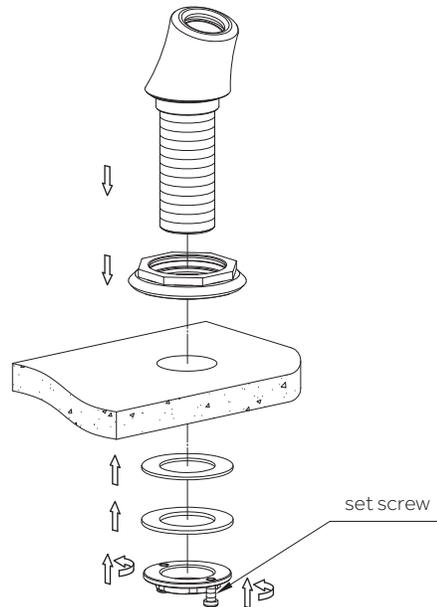washer connector connecting tube ø16 O-ring

ø16 O-ring

6. Secure the valve stems to the surface by tightening the lock nut firmly from below, as shown. To finish securing, tighten the set screws located on the lock nuts. Then, attach the handles to the valves using the provided screws and screw covers.

set screw

7. Remove the locking nut, locking washer, and rubber washer from the handshower cradle.
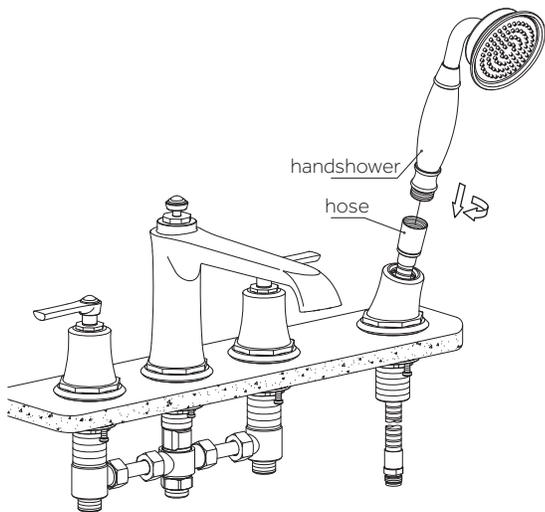

8. Insert the handshower cradle into its prepared mounting hole. From below, reinstall the rubber washer and locking washer. Tighten the locking nut, then tighten the set screw to secure the cradle.
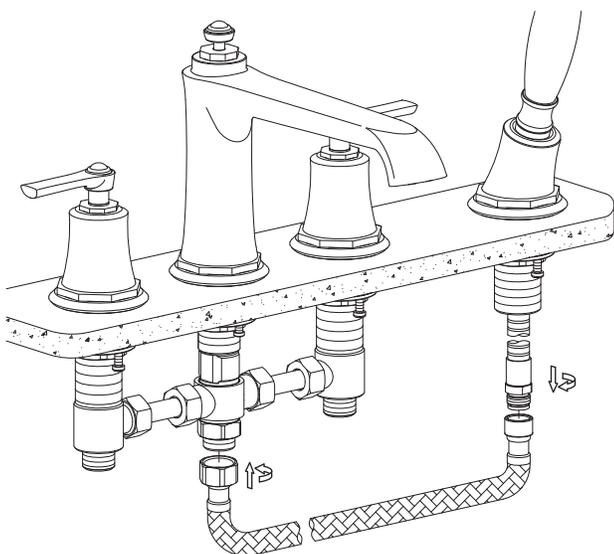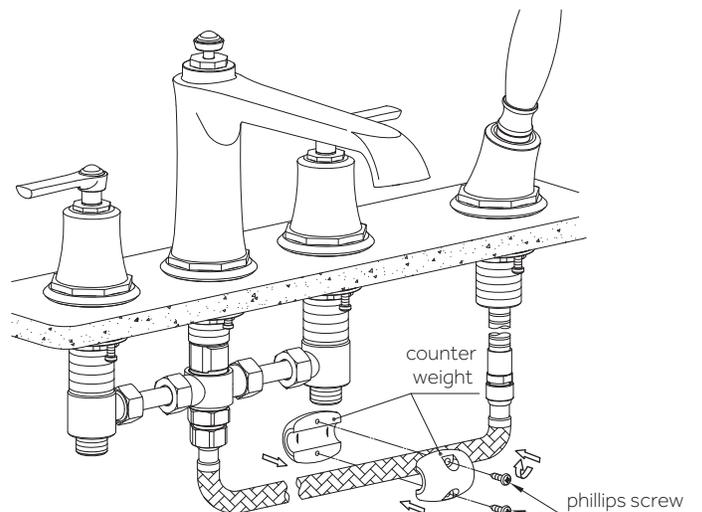

set screw

9. Connect the handshower to the handshower hose, then feed the hose through the top of the installed handshower cradle.

handshower

hose

10. From below, connect the handshower hose to the middle outlet of the T-connector, as shown. Apply plumber's tape or thread sealant to the threads before tightening. Tighten firmly using an adjustable wrench.

11. Install the handshower's counter weight onto the handshower hose, as shown. Place the weight just above the bend in the hose.

counter weight

phillips screw

12. Attach the main water supply lines to the inlets of each valve system, as shown. Apply plumber's tape or thread sealant to the threads before tightening. Once connected, turn the faucet on to ensure functionality and to check for any leaks.

cold water

hot water